


# QUICK GUIDE

## Flexlock Invisible EM 125 KHz

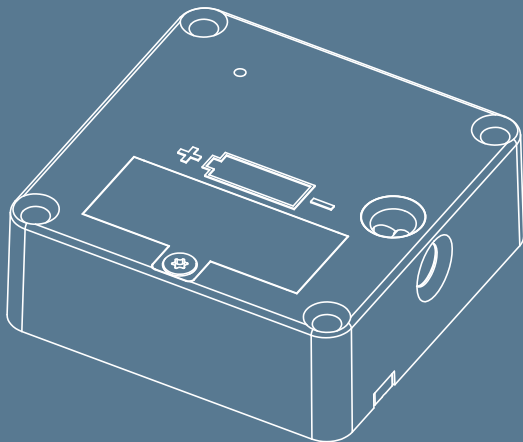

## PROGRAMMING

## Remove or add users in Mode 1 or Mode 2



- 1 Place the programming card on the lock.



- 2 The programming signal will sound for 7 seconds.



- 3 Place the user card to be added or removed on the lock.



- 4 An confirmation or erase signal will sound.

Continue adding users by repeating.  
Maximum 45 users.

---

Wait 5 seconds before you check.  
If the user card is removed an error signal will sound.

## PROGRAMMING

## Change Mode 1 to Mode 2, 3, 4 or 5



- 1 Place the programming card on the lock.  
A signal will sound for 7 seconds.



- 2 Place the desired mode card on the lock within 7 seconds.  
A double confirmation signal will sound.



- 3 Place the programming card on the lock again.  
A signal will sound for 7 seconds.



- 4 Place the service card on the lock within 7 seconds.  
A confirmation signal will sound.

---

When changing between modes you always have to reset the lock to Mode 1.

## PROGRAMMING

## From mode 2, 3, 4 or 5 to mode 1



- 1 Place the programming card on the lock.  
A signal will sound for 7 seconds.



- 2 Place the mode card you are programming from within these 7 seconds until you hear a signal.



- 3 Place the programming card on the lock again.



- 4 The programming signal will sound for 7 seconds.



- 5 Place the service card on the lock within 7 seconds.



- 6 A confirmation signal will sound.

## PROGRAMMING LOCKS IN MODE 1 OR 2

## Add Ready to use



- 1 Place the programming card on the lock.



- 2 The programming signal will sound for 7 seconds.



- 3 Place the Ready to use card on the lock within 7 seconds.



- 4 A double confirmation signal will sound.

---

The lock is now ready for a new unique user that will be added to the lock.

## PROGRAMMING

**Sound on/off**

- 1 Place the programming card on the lock.



- 2 The programming signal will sound for 7 seconds.



- 3 Place the Sound on/off card on the lock within 7 seconds.



- 4 ON: A double confirmation signal will sound.  
OFF: The signal will stop sounding.

---

If the sound is on. Users will now hear a confirmation signal when opening or closing the lock.

## PROGRAMMING

**Reset the lock to Mode 1**

- 1 Place the programming card on the lock for 10 seconds.



- 2 A reset signal will sound.



- 3 Wait 10 seconds, then place the programming card on the lock again.



- 4 Repeated signals will sound for 7 seconds.



- 5 Place the service card on the lock within 7 seconds.



- 6 A confirmation signal will sound.

Find out more at:  
**flexlock.se**

---

**Swedstyle AB.**

Box 171, SE-567 24 Vaggeryd, Sweden  
info@swedstyle.se  
+46 393-363 60  
www.swedstyle.com

